148.5x210mm

Yoei Popcorn Maker
Instruction Manual

Instruction Manual

Please read this manual before using the product. The product is designed for household use only.

Introduction

Congratulations on your purchase of the Yoei Popcorn Maker and welcome to the Yoei Family. The popcorn machine integrates traditional cooking techniques with modern cooking technology. Accurate temperature control and even heat distribution by the rotating stirrer ensure that the popcorn is always crispy and golden. More than cooking popcorn, it can also roast peanuts, soybeans, etc. With its stylish appearance, exquisite design and reliable quality, the popcorn machine is your best buddy when you are holding a party or watching movies with friends.

Parts and Assembly

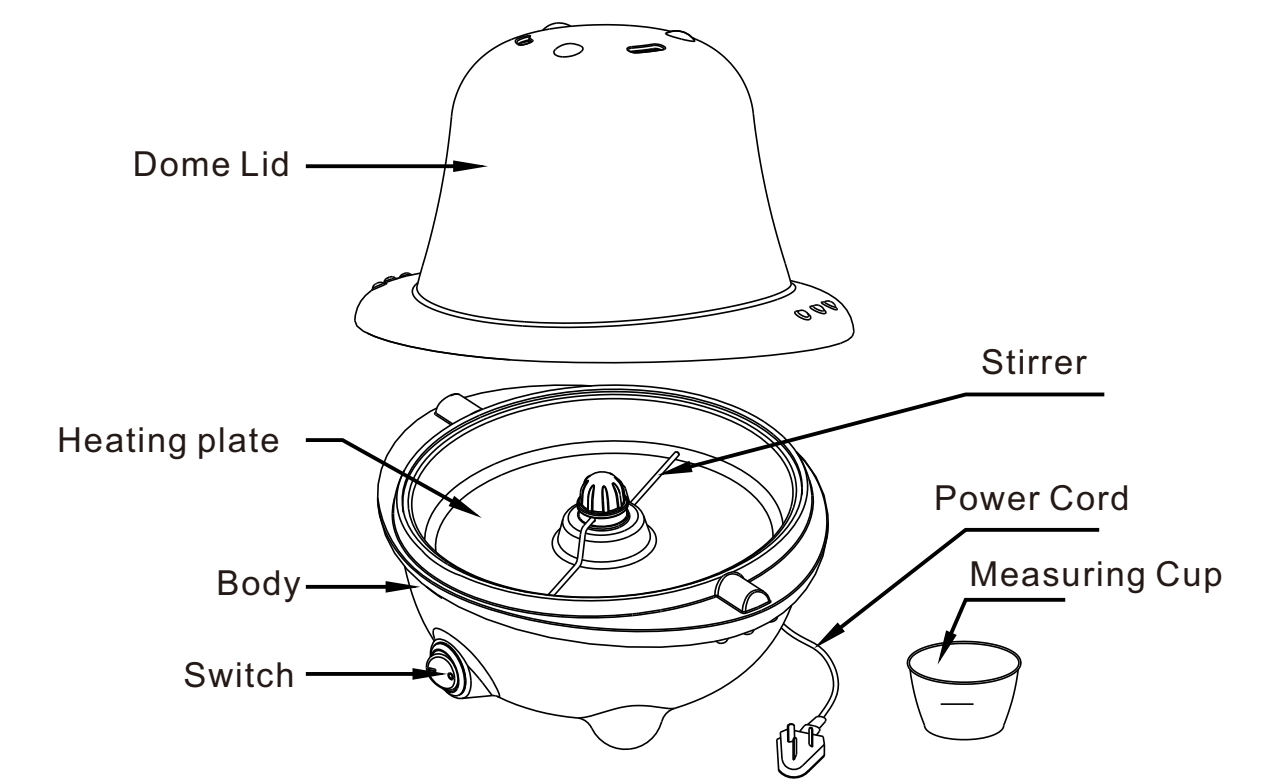

Features:

1. Exquisite design and stylish appearance.
2. One button control, easy to operate.
3. Transparent cover, easy to monitor the making process.
4. Automatic constant temperature control and over-heating protection, safe and reliable
5. Multi-function for popcorn, roasted peanuts, soybeans, etc.
6. Automatic stirring to guarantee even distribution of heat from heating plate.

Instruction

Popcorn

1. Clean the heating plate with a moist cloth before use. (Figure 1) Do not wash with water (Figure 2).

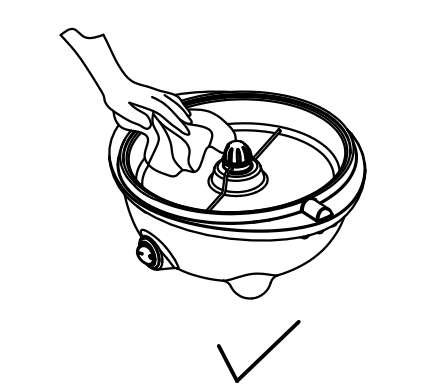
Figure 1

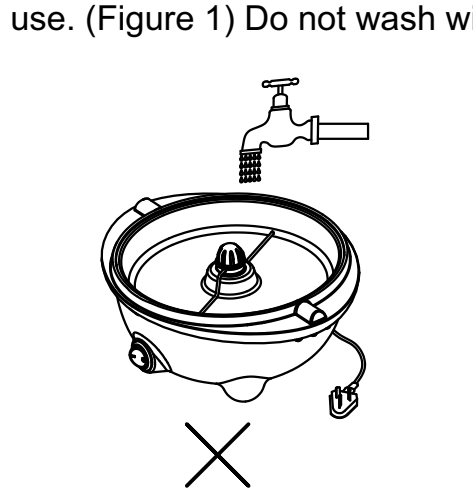
Figure 2

2. Put 1 tablespoon of oil onto heating plate (Figure 3), measure half a cup of popcorn and pour them onto the heating plate (Figure4). Add sugar (2 tablespoons of sugar recommended) and other flavoring.

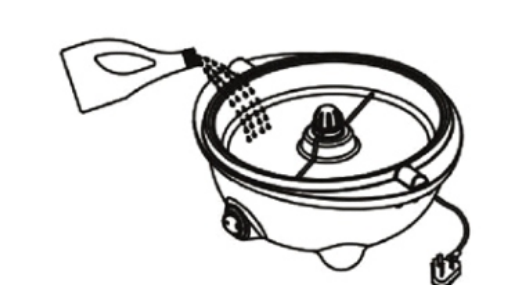
Figure 3

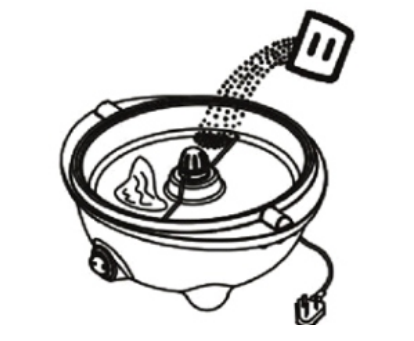
Figure 4

3. Cover with the dome lid and plug into the power supply (Figure 5). The stirrer start moving.
4. Press the power button (Figure 6), the switch indicator lights up and the heating plate starts to warm up.

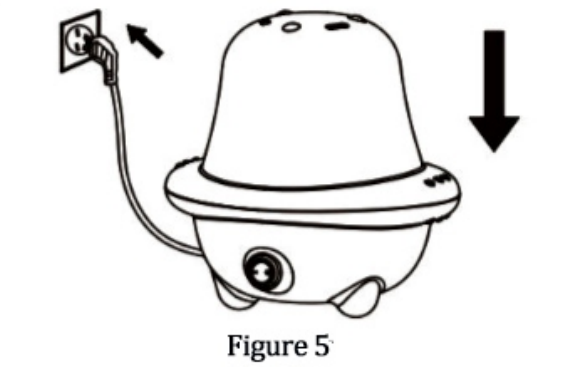
Figure 5

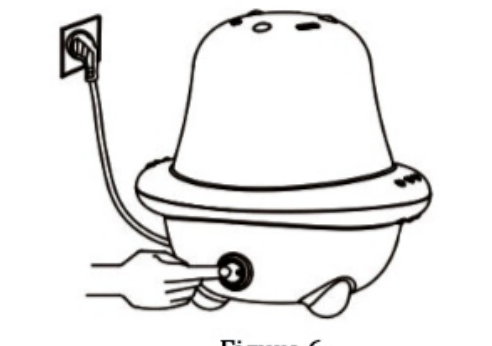
Figure 6

5. The kernels will start popping after 3 to 5 minutes, and then slow down. The bursting will speed up gradually and then slow down. The indicator will turn off automatically when the temperature is sufficiently high. Wait till the popping dies down. Switch off the machine and pull out the plug (Figure 7).

6. Holding the dome cover and the machine body together with both hands, turn over the machine to transfer the popcorn onto the dome lid (Figure 8). Remove the machine body (Figure 9) and wait for the popcorn to cool down. Now you can enjoy your popcorns.

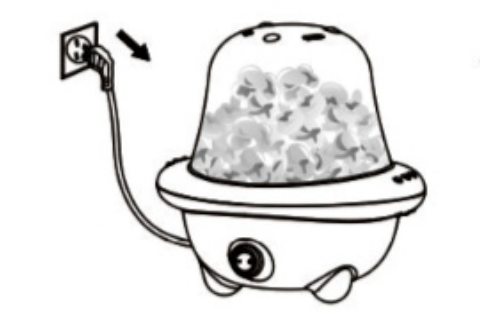
Figure 7

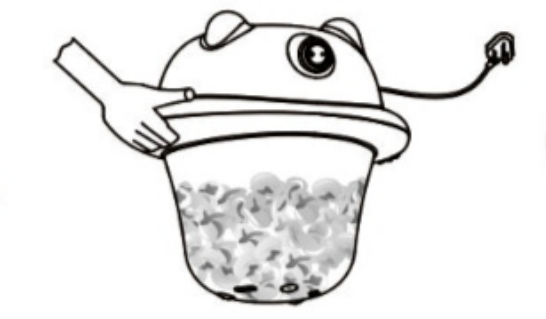
Figure 8

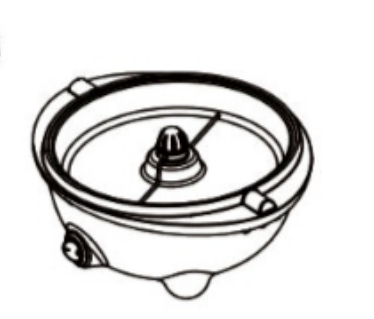
Figure 9

Note:
1. If there are many unpopped kernels, increase the amount of oil the next time.
2. This appliance is equipped with a safety thermal fuse that will automatically disconnect from the power supply when it is overheated. The appliance will restart operation after cooling down for approximately five minutes.

Peanuts:

1. Clean the heating plate with a moist cloth before use. (Figure 1) Do not wash with water (Figure 2).
2. Put 1 tablespoon of vegetable oil onto heating plate (Figure 10), and plug in the power supply. The stirrer starts to move.
3. Turn on the power (Figure 11) and follow the instructions for popcorn. After 1 to 2 minutes, when bubbles start appearing in the oil, add 70g of peanuts. (Figure 4).

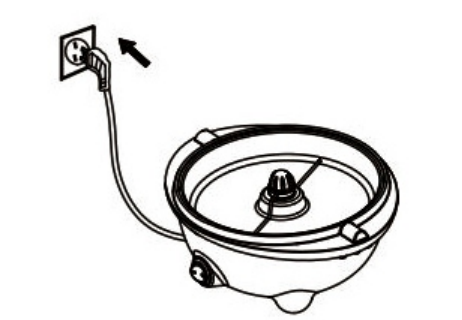
Figure 10

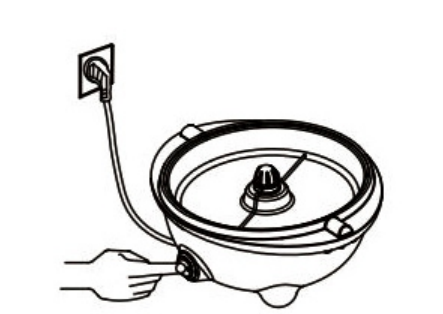
Figure 11

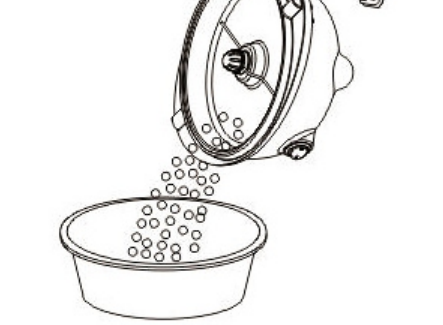
Figure 12

4. The nuts will start to browning after 2 to 3 minutes. Turn off the switch, but do not unplug the power cord so that the stirrer keep moving. The residual temperature within will continue roasting the peanuts.

5. Turn off the switch when the peanuts are sufficiently browned. Pull out the plug (Figure 7) and transfer the peanuts into a container for mixing. Do not use plastic containers (Figure 12)
6. Add flavoring (sugar, salt, etc.). Wait for the peanuts to cool down and now you can enjoy the peanuts.

Note: Use the same method to roast soybeans etc.

Cleaning and maintenance

1. Unplug appliance before cleaning or performing maintenance. (Figure 7)
2. After the popcorn maker has cooled down, remove the remaining food from the heating plate and wipe it with a moist cloth, then wipe it again with a dry cloth.
3. Do not use a hard brush on the heating plate to avoid damaging the non-stick layer.
4. Clean the appliance after use. Food residue may cause corrosion on the non-stick layer if not cleaned promptly.
5. Do not use a hard brush to wash the dome cover to avoid scratches.
6. Keep the appliance in a ventilated, dry and cool place.

Important Notice

1. Please read this manual carefully before using the appliance.
2. Before connecting the appliance, check if the voltage indicated on the appliance corresponds to the local mains voltage.
3. Place the machine on a flat and stable surface. Please do not touch any metal part of this machine when it is in use to avoid burns or scalds.
4. When in use, do not move the machine. Monitor closely to avoid burning the popcorn, peanuts or soybeans.
5. When plugging in or removing the power supply, hold the plug instead of the cord to avoid damaging the cord.
6. Do not hang the cord over sharp objects and make sure the cord does not contact hot surfaces directly.
7. This machine is designed for indoor use ONLY.
8. As the heating plate heats up quickly, have oil and popcorn kernels/peanuts/soybeans ready before connecting the appliance to the power supply / turning .
9. Avoid sharing the power supply outlet with other appliances. The power extension cord is not recommended.
10. If the appliance malfunctions or is damaged, do not attempt any repair. Bring it to any Yoei customer service centre or authorised agent for servicing.
11. Keep the appliance strictly out of the reach of children.
12. Remove the plug and cool down the appliance before cleaning. Never place the appliance into water or any liquid. Clean the body with a moist cloth.

13. If any of the following situations occurs, stop using the appliance immediately and send it to the distributors or Yoei service centre:
    (1) The power cord is damaged. (2) Plug looses. The power plug is loose.
    (3) Damaged by Collision or dropping. (4) Accidental immersion in water

Trouble Shooting

Number	Fault phenomena descriptions		Possible reason	Recommended actions
1	Switch indicator light is not bright lit	Heating plate does not work	1.The main power cord is not connected. 2.The switch is damaged. 3.The fuse is blown.	1.Check the plug, socket, socket on/off button, fuse and power supply. 2.Send for servicing and replace the switch.
		Heating plate works	1.The switch indicator light is damaged. 2.The switch light cord is disconnected.	1.Send the appliance for servicing and replace the switch. 2.Send for servicing to reconnect the switch light cord.
2	Switch indicator light is bright lit	Heating plate does not work	1.The heating unit is disconnected from power supply. 2.The heating unit is damaged	1.Send for servicing to reconnect the heating unit cord. 2.Send for servicing to replace the heating unit.
3	The stirrer does not rotate	Heating Plate works	1.The motor is disconnected from power supply. 2.The motor is damaged.	1.Send for servicing to reconnect the motor cord. 2.Send for servicing to replace the motor.
		Heating Plate does not work	1.The main power cord is not connected. 2.The main power cord is damaged.	1.Reconnect the main power cord. 2.Send for servicing to replace the power cord.

Product warranty and purchasing information:
Please visit www.YoeiGroup.com for more information on warranty, recipes and product purchase.

产品简介

感谢您选用“Yoei”爆米花机系列产品！
本产品将传统烹饪技术和现代家电技术互相结合，是我公司自主研发的产品之一。时尚外观，精致工艺，使用安全可靠。爆米花机工作时，盘内搅拌杆自动旋转，让食物受热均匀，爆出的爆米花大小饱满、均匀。除了能爆爆米花外，还能炒花生、黄豆等。

零部件介绍

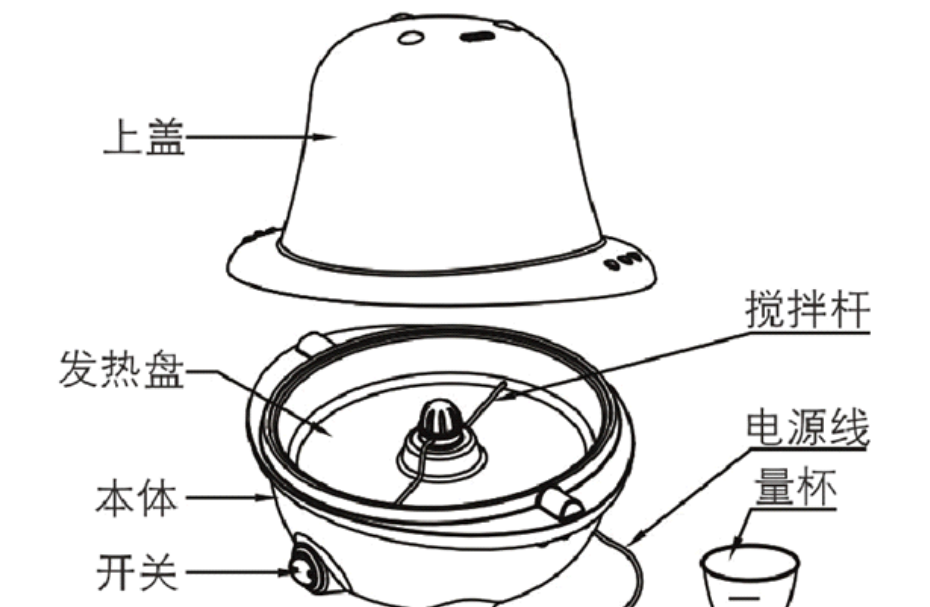

主要特点

1. 精致设计，时尚外观。
2. 操作简单、使用方便。
3. 透明上盖，食物制作过程一目了然。
4. 采用自动恒温和高温断电保护，安全可靠。
5. 具有多功能特点，如：爆玉米花、炒花生米和炒豆类等。
6. 自动搅拌，食物受热均匀。

使用方法

（一）爆米花的做法：
1. 使用前，请用湿布抹净发热盘（如图1），切勿用水冲洗（如图2）。

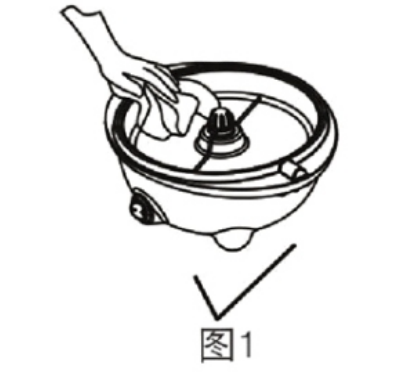
图1

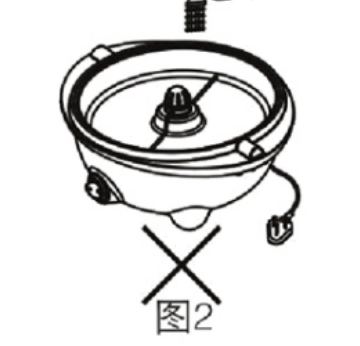
图2

2. 在盘内放入适当的植物油（约15g，如图3），再用量杯量取50g爆花玉米放入盘内（量杯刻度线，如图4），此时，可根据自己的喜好，在盘里放入一定的佐料（如：糖、盐等其他香料），味道会更加可口。

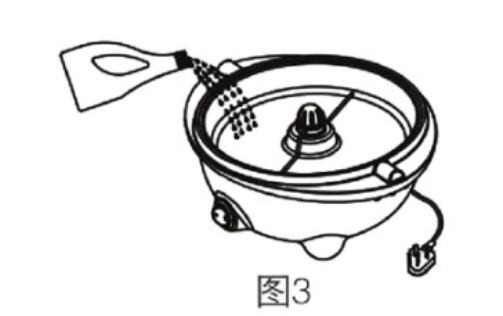
图3

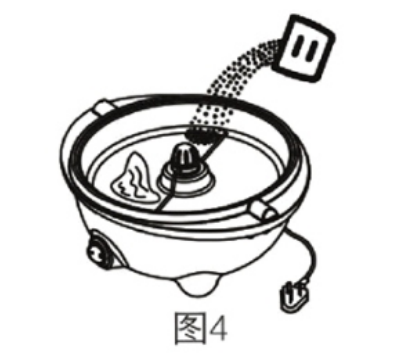
图4

3. 盖上上盖，再插上电源插头如图5，此时，盘中的搅拌杆开始旋转。
4. 打开电源开关（如图6），此时开始加热，开关指示灯亮起。

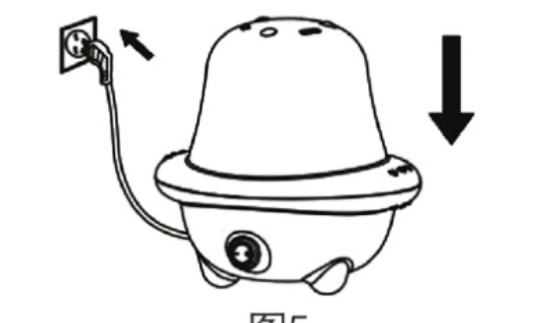
图5

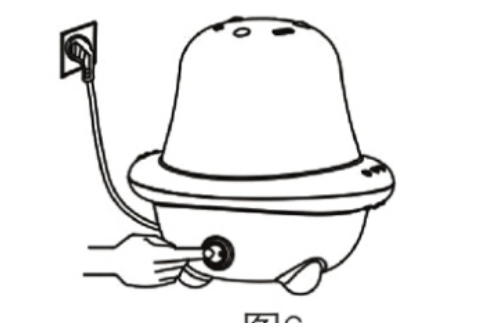
图6

5. 在加热3-5分钟时，玉米开始在盘内一粒一粒啪啪起爆，爆开速度逐渐加快，待盘内爆裂声逐渐缓慢到结束无啪啪声时，此时玉米已充分爆开，再请关掉开关，然后再拔下插头（如图7）。
6. 双手抓住上盖和本体两边的手把，将本体和透明上盖同时倒置，把爆米花倒入上盖中 (如图8)，然后端下本体，放在一边，准备下次使用。（如图9）

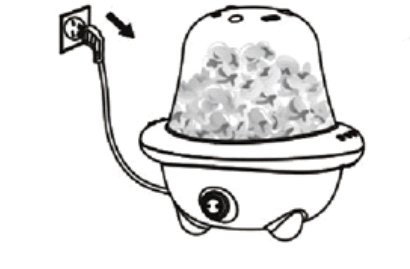
图7

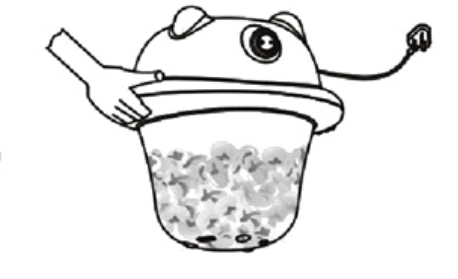
图8

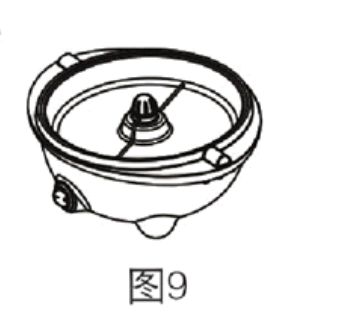
图9

注意：
1. 如果爆米花爆得不够饱满，可在下次使用时增加油的份量。
2. 为了你的使用安全，每使用一次后，机器会启动过热保护，不能马上再使用，大约要等5分钟左右才能恢复，请耐心等待。

（二）花生米的做法：
1. 使用前，请用湿布抹净发热盘（如图1），切勿用水冲洗（如图2）。
2. 在盘内放入适当的植物油（约15g，如图3），再插上电源插头（如图10），此时，盘中的搅拌杆开始旋转。
3. 打开电源开关（如图1 1），此时开始加热，开关指示灯亮起，待1-2分钟，盘内的油开始起小泡泡时，此时用量杯量取70g（1杯）花生米放入盘内（如图 4）。

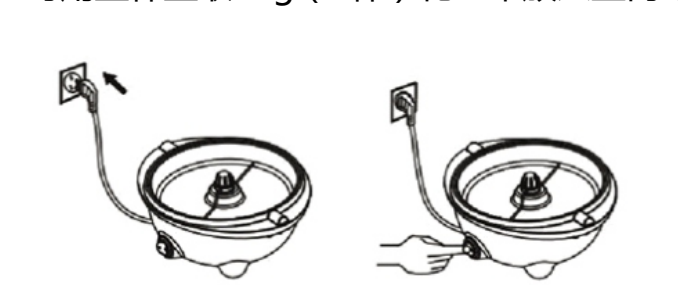
图10

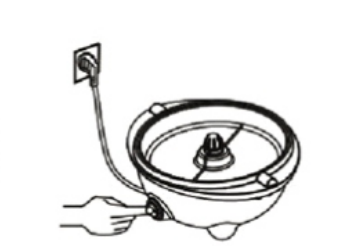
图11

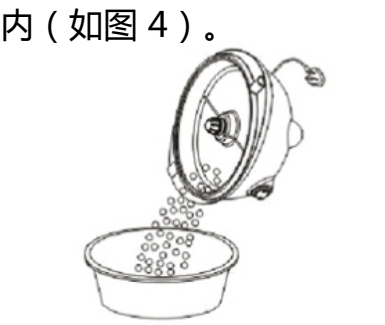
图12

4. 随时观察盘内花生米的情况，约2-3分钟左右，花生米开始变黄，此时请关掉电源开关，不要拔下插头，让搅拌杆继续工作，让盘内余温继续对花生米加热。
5. 炒花生米的成熟度，可根据个人的喜好，当你觉得满意时，就可以关掉开关，拔掉插头（如图7），将花生米倒在事先准备好的容器内（不能用塑料容器，如图12），将机器放到一边，准备下次使用。
6. 可加入自己喜爱的佐料（如：糖、盐等其他香料），即可使用；若待一会儿，等花生米凉了再吃，会更加香脆。

注意：炒其他豆类的方法同炒花生米相同。

清洁与保养

1. 在清洁与保养的作业前，务必要先将插头拔掉（如图7）。
2. 使用完待冷却后，将发热盘内剩余食物去除，用湿布擦拭，然后用干布擦干。
3. 清洁时请勿用硬刷子擦拭，因为那样会破坏不粘层。
4. 使用后，请及时整理发热盘内，不要让料理的残余物长时间放置着, 以免导致不粘层腐蚀或剥落。
5. 上盖请在加入一点洗洁精的水里，用柔软的布或海绵擦洗，再用清水冲洗干净，将水份全部擦干；不可用硬物擦洗（如钢丝球）。
6. 清洁干净后，用干布擦干水份，存放在通风、干燥、没有阳光照射的地方。

清洁与保养

1. 使用前请详细阅读本说明书，阅读完毕后妥善保管。
2. 本产品所连接插座应可靠接地，使用的电源电压与产品铭牌上标示的电压相符。
3. 使用时，请放置于平坦不易倾倒的桌面，请别触摸本机金属部分，小心烫手。
4. 本机工作时，请不要随便移动，需有人看护，以免误触而烫伤。
5. 插拔插头时，请握住插头部位，切勿拉住电源线，以免电源线受损。
6. 请勿让电源线悬于锐利的地方，亦勿让电源线靠近发热体，如瓦斯炉、电暖炉等等。
7. 此机只供室内使用，切勿用于室外使用或做其他用途。
8. 为防止不慎触摸而发生烫伤，在食物及佐料未准备妥善前，请不要接上电源。
9. 请勿与其他电器共用一个插座，避免使用拖板插座，防止因过热而引起火灾。
10. 请勿自行拆装、修理及改造内部零件，有任何故障以及异常问题，请送至经销商指定地点由专人维修。
11. 请勿让孩童使用，收藏时，请放置于孩童不易触碰的地方。
12. 清洗前，先将电源插头拔下，让其自然降温；为避免触电，切勿把插头或本机浸于液体或水里，清洁时请用湿布抹净。
13. 如电源线软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。
14. 下列情形发生时请立即停止使用，并送至经销商或本公司服务部门处理：
    (1). 电源线破损。 (2). 插头松动。
    (3). 碰撞或摔落损坏。 (4). 不慎掉入水中。

常见故障分析

以下表格总结了产品使用过程中可能出现的最常见问题。如果根据以下信息还是不能有效解决您所遇到的产品问题，请及时联系Yoei在您所在地区的维修中心。

序号	故障现象		产生原因	排除方法
1	开关指示灯不亮	盘底不发热	1，电源线没有接通 2，开关损坏 3，保险丝烧坏	1， 检查插头,插座,插座开关盒插座保险丝,电源引线是否完好。 2，更换开关 3，查明原因并排除故障，再更换保险丝。
		盘底发热	1，指示灯损坏 2，指示灯接线脱落	1，更换开关 2，把指示灯连线插紧、接牢
2	开关指示灯不亮	盘底不发热	1. 发热管连接线脱落 2. 发热管损害	1. 把连线插紧、接牢 2. 更换发热盘
3	搅拌杆不转动	盘底发热	1. 电机接线脱落 2. 电机损坏	1. 接好电机连线 2. 更换电机
		盘底不发热	1. 电源接线脱落 2. 电源线损坏	1. 重新接好接线头 2. 更换电源线

产品保修及购买
更多产品保修，购买和食谱信息，请浏览 www.YoeiGroup.com

商品の説明

Yoeiポップコーンマシンの製品
伝統的な調理技術と組み込まれ、近代的な電化製品をお買い上げいただき、ありがとうございい同社は、製品の一つを開発しました。ファッション外観、職人、安全性と信頼性。ロッドを攪拌すると、自動的に回転したときに食べ物が均一に加熱されるように、ポップコーンマシン、トレイ、ポップコーン完全な均一の大きさのバースト。トウモロコシだけでなく、ローストピーナッツ、大豆をポップアップできるように加えて。

パーツ名

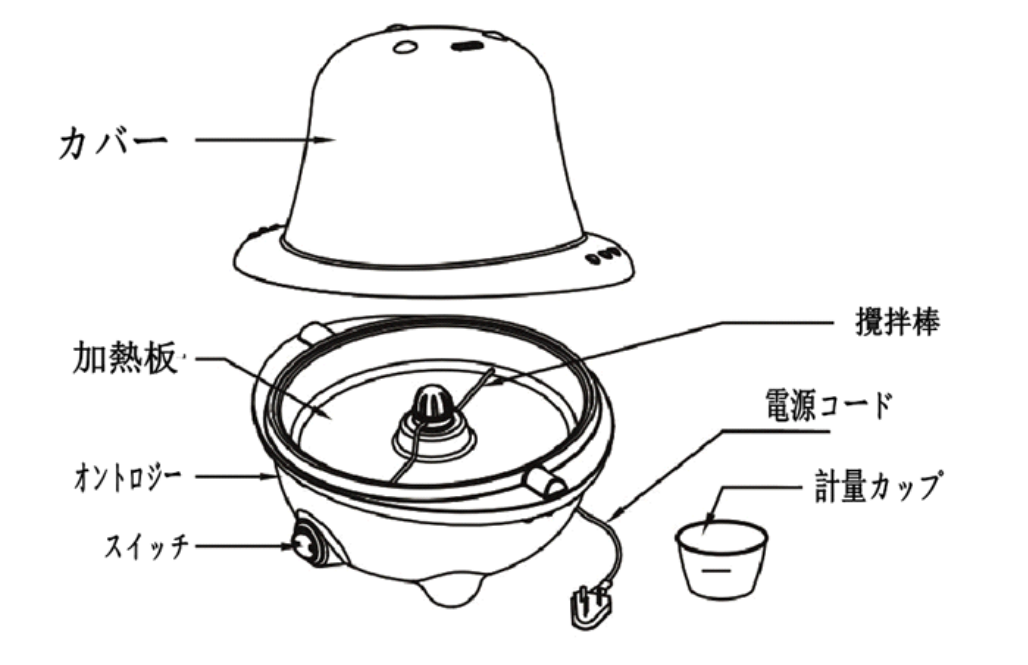

主な特長

1. 洗練されたデザイン、スタイリッシュな外観。
2. 操作は、シンプルな使いやすいです。
3. 透明カバー、一目で食品の製造工程。
4. 自動サーモスタットと高温の電源保護、安全性と信頼性。
5. などの多機能特性：ポップコーン、フライドピーナッツ、揚げ豆。
6. 自動混合、食べ物が均等に加熱される。

使用方法

（A）ポップコーンの実践：
1.ご使用になる前に、ぬれた布の加熱板（図1）と水（図2）で洗浄しないでください。

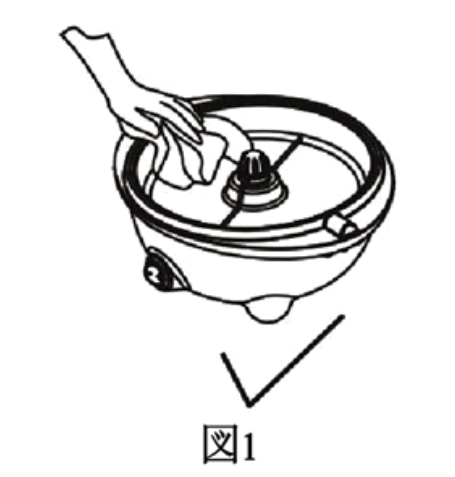
図1

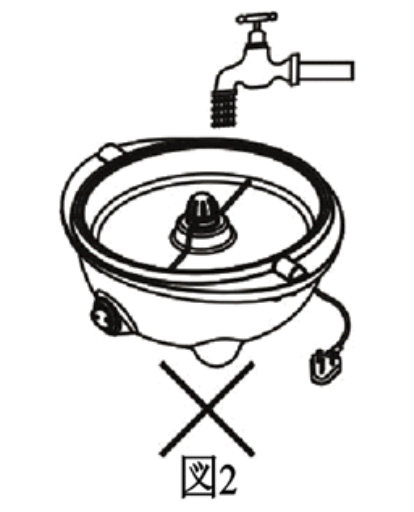
図2

2. 自分の好みによると、この時点で（カップ目盛線を測定し、図4に示すように）適切な植物油（約159、図3に示すように）にディスク内の、次に給紙トレイに50グラムポップコーンを測定するために計量カップ（例えば：砂糖、塩、その他の香辛料）調味料の一定額にプレートが、味はもっと美味しいでしょう。

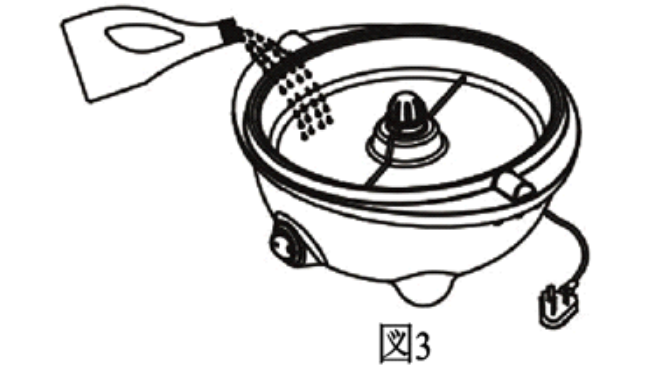
図3

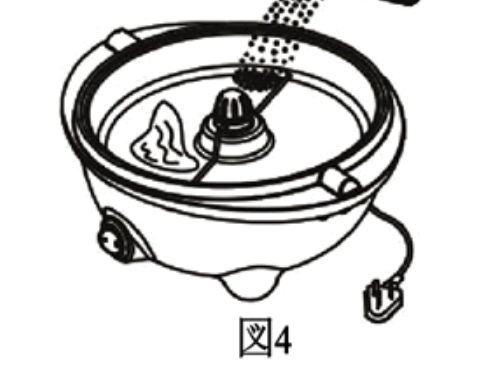
図4

3. カバーするためにカバーし、図5の電源プラグCプラグ、この時間は、攪拌棒のディスクが回転を開始します。
4. 電源スイッチ（図6）、暖房、スイッチのインジケーターが点灯をオンにします。

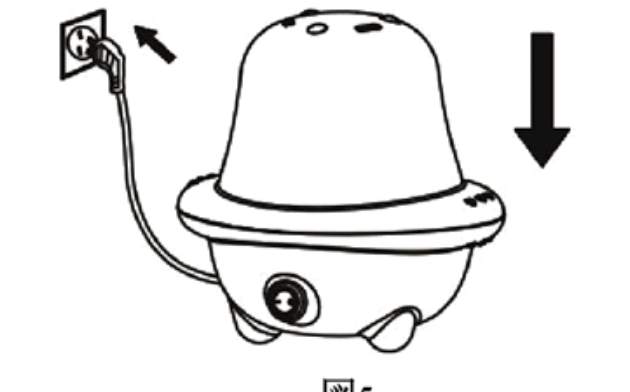
図5

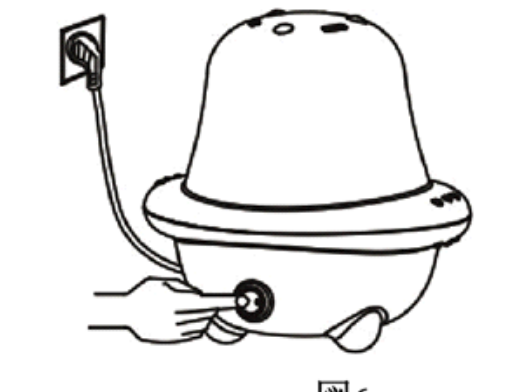
図6

5. ディスクがポップせずに最後まで徐々に捻髪音まで3-5分の熱は、1内のディスクのトウモロコシが爆発、バースト速度をポップアップ表示され、トウモロコシが完全に開いて破裂しています。スイッチをオフにしてください、プラグイン（図7）を抜いてください。

6. 両手は、次の使用する準備ができて、側に体の下側にして上部構造で（図8）にポップコーンを入れ、逆さにし、同時にハンドル本体と透明なトップカバーの両側のカバーと本体を把握します。（図9）

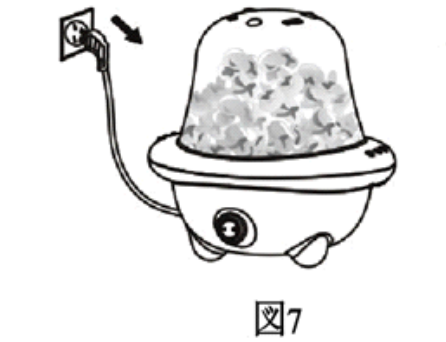
図7

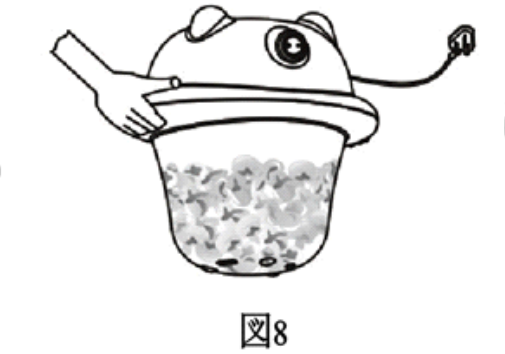
図8

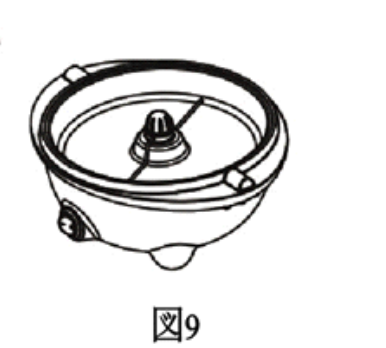
図9

注：
1.ポップコーン爆発が完全でなかった場合、次の使用されている油の重量を増加させます。
2.すべての使用の安全にお使いいただくために、マシンが回復するために約6分、すぐに再利用することはできませんが、過熱保護を開始しますが、我慢してください。

（B）ピーナッツ·プラクティス：
1.ご使用になる前に、ぬれた布の加熱板（図1）と水（図2）で洗浄しないでください。
2. 次に、適切な植物油（約159、図3に示すように）、この時点で、電源プラグ（図10）のプラグインにディスク内の、日中の攪拌棒が回転を開始します。
3.電源スイッチ（図11）を回して、加熱すると、スイッチランプが点灯している、1~2分待ってから、油がトレイに小さな泡を再生し始めたとき、そのガラスのボリュームの量が709を取る（1カップ）ピーナッツトレイに（図4）。

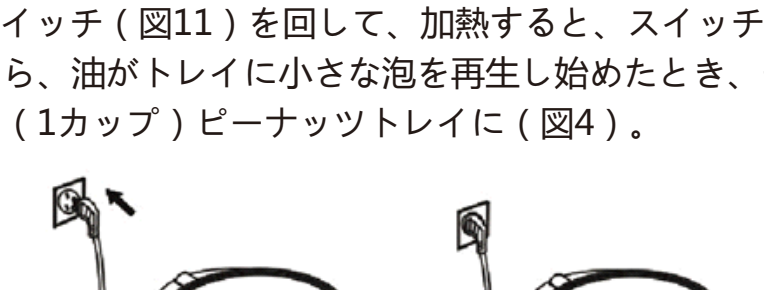
図10

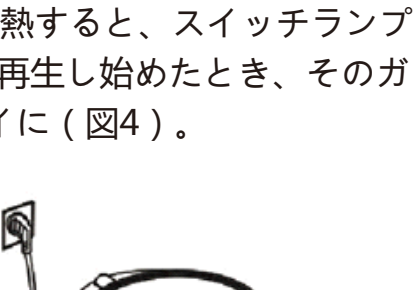
図11

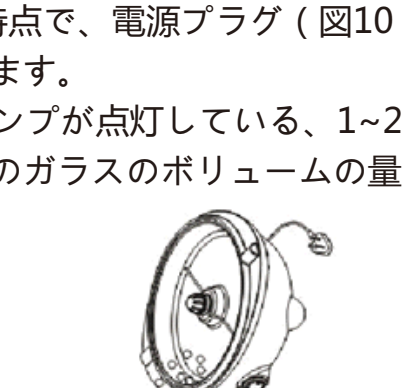
図12

4. 常に2~3分程度、トレイにピーナッツのケースを観察し、ピーナッツは黄色になり始め、その後電源スイッチをオフにして、うだるような内部のトレイはピーナッツを続けるように、攪拌棒が作業を続行するように、プラグを抜いていない加熱。
5. 油で揚げたピーナッツの成熟度は、個人の好みに応じて、あなたが満足を感じる時、あなたは、スイッチをオフにすることができます（図7）。プラグを抜いて、事前にダウンピーナッツ（ないプラスチック容器の良い容器を準備する図12）はさておき、マシン、次に使用する準備ができました。
6. お好みの調味料（例えば：砂糖、塩、その他のスパイス）を追加することができ使用することができます。もう少し滞在すれば、クールなピーナッツ食べるよりクリスピーになります。注：ピーナッツ炒め揚げ他の豆。

クリーニングとメンテナンス

1. クリーニングとメンテナンス操作の前に、まず（図7）を抜いてください。
2. 使用し、冷却後、熱板に残っている食べ物は削除するには、湿った布で拭いて、乾いた布で拭いて乾かしてください。
3. それが非粘着層を損なうので、クリーニングには、きれいに堅いブラシを使用しないでください。
4. 使用後は、加熱プレートを仕上げタイムリーに、腐食の非粘着層が発生したり剥離しないように、調理残基が長く置かせてはいけない。
5. 柔らかい布やスポンジで水に少し洗剤を追加し、すべての乾燥した、水ですすぎ水を、上記のハードオブジェクト（鋼球など）とスクラブではない。
6. きれいな水は、乾いた布で乾燥した、換気、乾燥に格納されません日光の場所はありません。

安全上のご注意

1.保管を読んだ後、ご使用前にこの取扱説明書をよく読んでください。
2. この製品は、3つのプラグの構造、すべてのソケットを確実に接地する必要があり、電源電圧および製品の銘板の一致に記載されている電圧です。
3. フラットに配置され、簡単にダンピングデスクトップの使用ではありませんが、機械の金属部分に触れないでください、ホットに注意してください。
4. 機械作業は、それがないようにうっかり"や火傷、移動世話をする誰かを必要はありません。
5. プラグ、プラグの部分を保持するには、電源コードを傷つけないようにように、電源コードを引っ張らないでください
6. 電源コードが鋭いハングさせない、熱源の近くなど、ガスストーブ、ヒーター等の電源コードをさせない
7. このマシンは、屋外での使用、または他の目的のために、屋内での使用をしないことです。
8. 不注意な接触を防ぐためにバーンズ、よく準備されていない食品や調味料の電源にプラグインしないでください。
9. 他の電気器具とコンセントを共有していない、過熱を防ぐため、火災の原因となるために、拡張ユニットのソケットを使用しないでください。
10. 内部部品の修理や変換を分解しないで、手でディーラー指定された場所の維持に送信されるすべての障害、および例外がある。
11. 子供が使用することはできません、子供に置かコレクションは、場所に触れることは容易ではありません。
12. 最初に電源プラグの前に洗浄して、抜いて自然冷却させ、電気ショックを避けるために、液体や水に浸漬し、マシンを接続しないで、濡れた布で清掃。

13. 電源ラインの脊髄損傷は、危険を避けるために、メーカー、保守部門または同様の有資格者によって置き換えられなければならない場合
14. 次のような状況が発生した場合、ただちに使用を中止し、対処するため、販売店またはサービス部門に送られてください:
    （1）電源コードが破損しています。 （2）プラグ緩い。
    （3）衝突や落下ダメージ。 （4）誤って水中に落ちる。

一般的な故障解析

この章では、アプライアンスで発生する可能性が最も一般的な問題をまとめたものです。あなたは以下の情報で問題を解決できない場合、あなたの国のコンシューマーケアセンターにお問い合わせください。

いいえ	破壊現象		原因	救済策
1	スイッチの光は明るくないです	シャーシには熱はありません	1.電源コードが接続されていません 2.スイッチが破損している3.ヒューズが溶断されてい	1.は、プラグ、ソケット、ソケットコンセントヒューズスイッチボックス、電源リードが無傷であることを確認してください。 2.スイッチを交換 3.理由は、トラブルシューティングを特定し、ヒューズを交換します。
		シャーシの発熱	1.光損傷 2.光配線オ	1.スイッチを交換 2.接続インジケータ装
2	スイッチのランプが点灯しない	シャーシには熱はありません	1.加熱管のリンク線の損失 2.ヒートパイプの損傷	1. タイトで、その後刑務所への接続 2. 加熱プレートの交換
3	攪拌棒が回転しない	シャーシの発熱	1.電気配線オフ 2.モータの損傷	1.接続されたモータの接続 2.モータを交換
		シャーシには熱はありません	1.電源ラインの配線オフ 2.電源コードが破損している	1.配線ヘッドを再接続する 2.電源コードを交換

製品保証と購入情報：
保証は、製品の購入とレシピの詳細については、www.YoeiGroup.comをご覧ください。

Square Capital International (Singapore)
Customer Hotline: +65 6790 8250
Website: www.YoeiGroup.com
Please visit our website for more information on warranty, recipes and product purchasing.

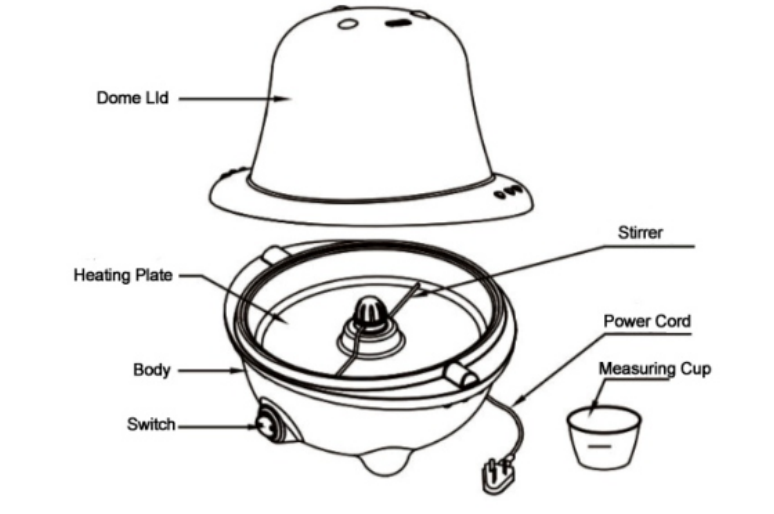
Dome Lid
Stirrer
Heating Plate
Power Cord
Measuring Cup
Body
Switch

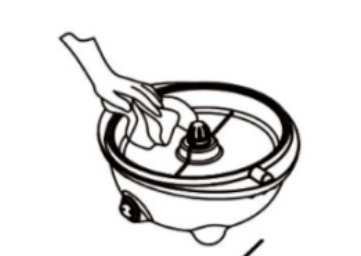
Figure 1

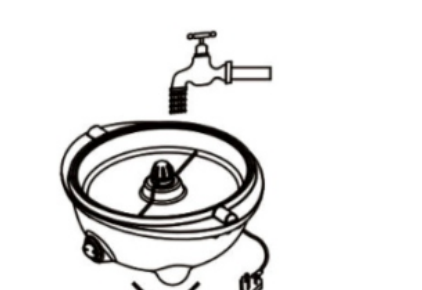
Figure 2

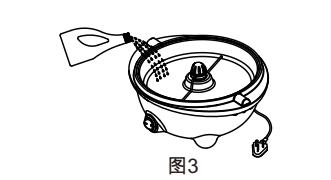
图3

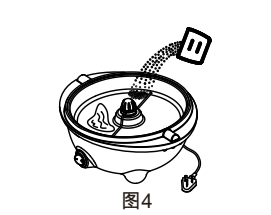
图4


图5


图6


图7


图8


图9

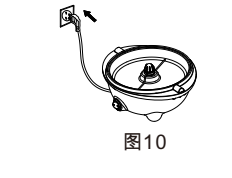
图10


图11

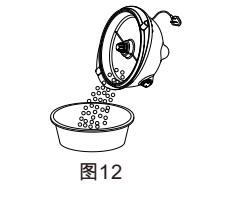
图12

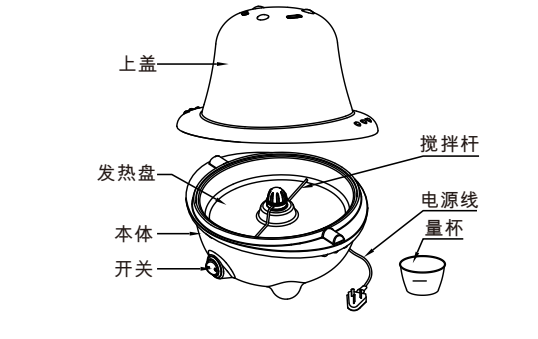
上盖
搅拌杆
发热盘
电源线
量杯
本体
开关